

QUICK START GUIDE | MODEL 485T




1



UNBOX

- PACKAGE SHOULD CONTAIN PRINTER, A POWER CORD, AND ANY OPTIONAL ITEMS YOU MAY HAVE PURCHASED
- STICKER ON BACK OF GUIDE WILL INDICATE MODEL TYPE
- PLEASE RETAIN ORIGINAL PACKAGING IN CASE OF A REPAIR

2

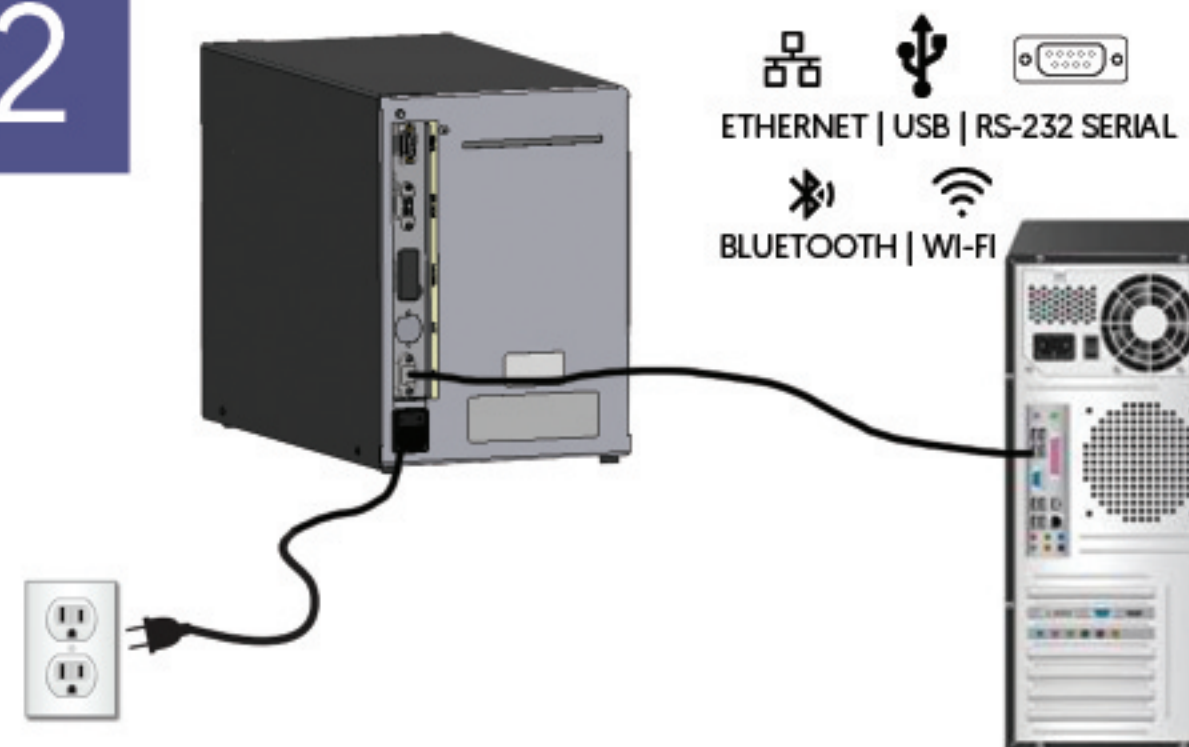

USB

- CONNECT POWER CABLE TO BACK OF PRINTER AND OUTLET
- CONNECT COMMUNICATION CABLE TO PRINTER PORT AND COMPUTER + POWER ON THE PRINTER
- SEE SECTIONS 2B, 2C, +2D for WiFi, Bluetooth, + Ethernet setup

3A



View 485T
Spec Sheet

Download Windows
Print Driver

WINDOWS

FOR WINDOWS USE:

- GO TO "microcomcorp.com/products/485t"
- SCROLL DOWN PRODUCT PAGE AND CLICK "DOWNLOAD WINDOWS DRIVER" BUTTON
- READ AND FOLLOW ALL DIALOGUE BOX INSTRUCTIONS


3B



FGL

- FOR FGL USE:
- AFTER COMPLETING STEPS 1 + 2, NO FURTHER ACTION IS REQUIRED TO CONNECT

4

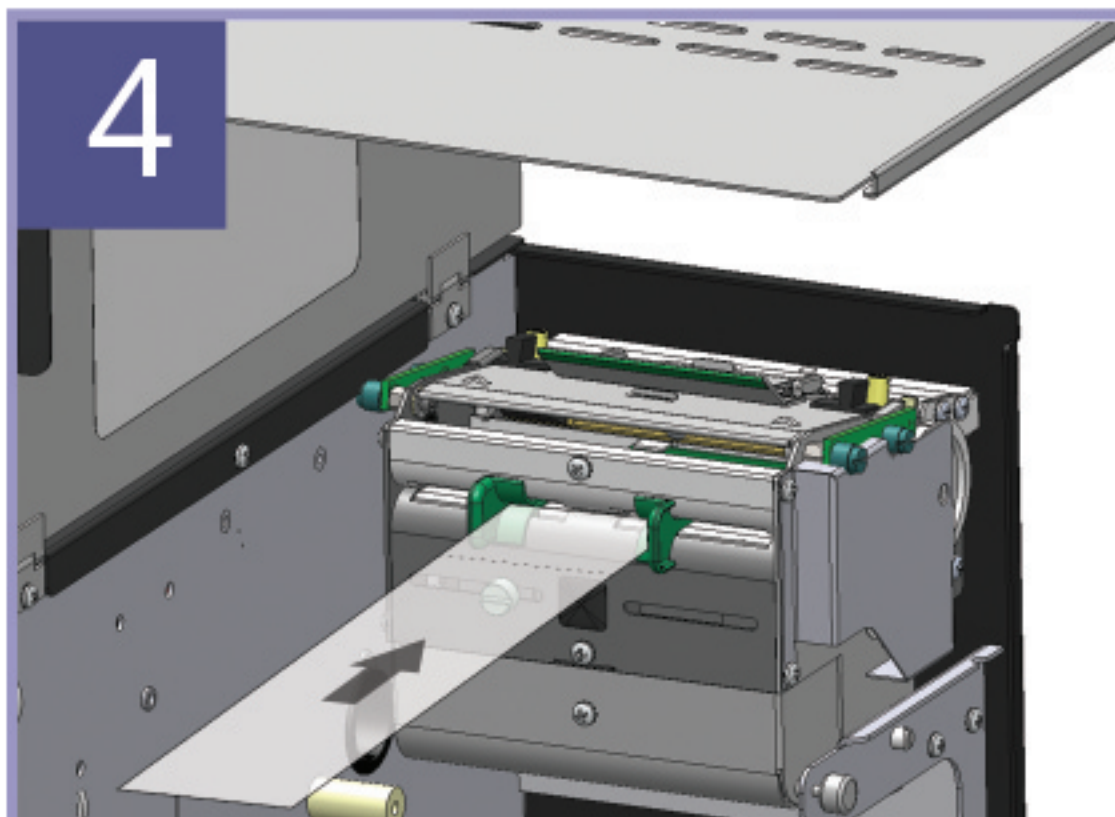

LOAD

- LOOSEN GREEN THUMBSCREW AND ADJUST GREEN MEDIA GUIDES TO FIT PREFERRED MEDIA
- AFTER ADJUSTMENT, RETIGHTEN GREEN THUMBSCREW
- FEED MEDIA INTO MEDIA ENTRY SLOT (ONCE PRINTER DETECTS MEDIA, IT WILL AUTO FEED AND ALIGN PAPER)

5



TEST

- TO PRINT TEST TICKET WITH FGL, PRESS PRINT BUTTON ONCE TO PRINT TEST TICKET WITH WINDOWS DRIVER:
- GO TO "CONTROL PANEL" THEN "DEVICES AND PRINTERS"
 - RIGHT CLICK THE 485TC AND SELECT PRINTER PROPERTIES
 - CLICK "PRINT TEST PAGE"

QUICK START GUIDE | MODEL 485T



2_B BLUETOOTH

INSTALL BLUETOOTH DONGLE IN HOST USB PORT

BLUETOOTH SETUP:

-From the home screen, select CONFIG MENU and then OPTIONAL PORTS. Make sure Bluetooth is selected and tap Save. Reboot the printer if prompted.

AFTER DOWNLOADING WINDOWS DRIVER (SEE 3A):

- Pair your printer to the PC via Bluetooth.
- Go to "Control Panel" then "Devices and Printers".
- Right-click your Bluetooth printer listing (Microcom485-BT by default) and select Properties.
- In the Hardware tab, make a note of the COM number next to Standard Serial over Bluetooth Link.
- Back in the Devices and Printers menu, right-click your Microcom Printer Driver listing and select Printer Properties.
- In the Ports tab, make sure the assigned COM port matches what was listed earlier in the Standard Serial over Bluetooth Link listing.

2_C ETHERNET

PLUG IN ETHERNET CABLE

CONFIGURE NETWORK SETTINGS:

-From the home screen, select CONFIG MENU and then OPTIONAL PORTS. Make sure Ethernet is selected and tap Save. Reboot the printer if prompted.

-You can configure network parameters by selecting CONFIG MENU and then ETHERNET.

AFTER DOWNLOADING WINDOWS DRIVER (SEE 3A):

- Go to "Control Panel" then "Devices and Printers".
- Right-click your Microcom Printer Driver listing and select Printer Properties.
- In the Ports tab, select Add Port. Highlight Standard TCP/IP Port and click New Port.
- Follow the prompts to set up a network port using your printer's IP address and port number (you can check the IP/port in the PRINTER INFO menu).
- Back in the Ports menu of the Printing Preferences, select the new network port and click Apply.

2_D WIFI

INSTALL Wi-Fi DONGLE IN HOST USB PORT

CONFIGURE NETWORK SETTINGS:

-From the home screen, select CONFIG MENU and then OPTIONAL PORTS. Make sure Wi-Fi is selected and tap Save. Reboot the printer if prompted.

-You can configure network parameters by selecting CONFIG MENU and then Wi-Fi.

AFTER DOWNLOADING WINDOWS DRIVER (SEE 3A):

- Go to "Control Panel" then "Devices and Printers"
- Right-click your Microcom Printer Driver listing and select Printer Properties.
- In the Ports tab, select Add Port. Highlight Standard TCP/IP Port and click New Port.
- Follow the prompts to set up a network port using your printer's IP address and port number (you can check the IP/port in the PRINTER INFO menu).
- Back in the Ports menu of the Printing Preferences, select the new network port and click Apply.


DIAGNOSTICS

TO VIEW PRINTER'S HARDWARE, USAGE, AND NETWORK INFO:

- Tap CONFIG MENU from the homescreen.
- Click NEXT to scroll through items until you reach PRINTER INFO.
- This process is the same for both FGL + IMAGE mode.

FOR ADDITIONAL ASSISTANCE CONTACT:

- SALES: SALES@MICROCOMCORP.COM
- SUPPORT: SUPPORT@MICROCOMCORP.COM
- SERVICE: SERVICE@MICROCOMCORP.COM

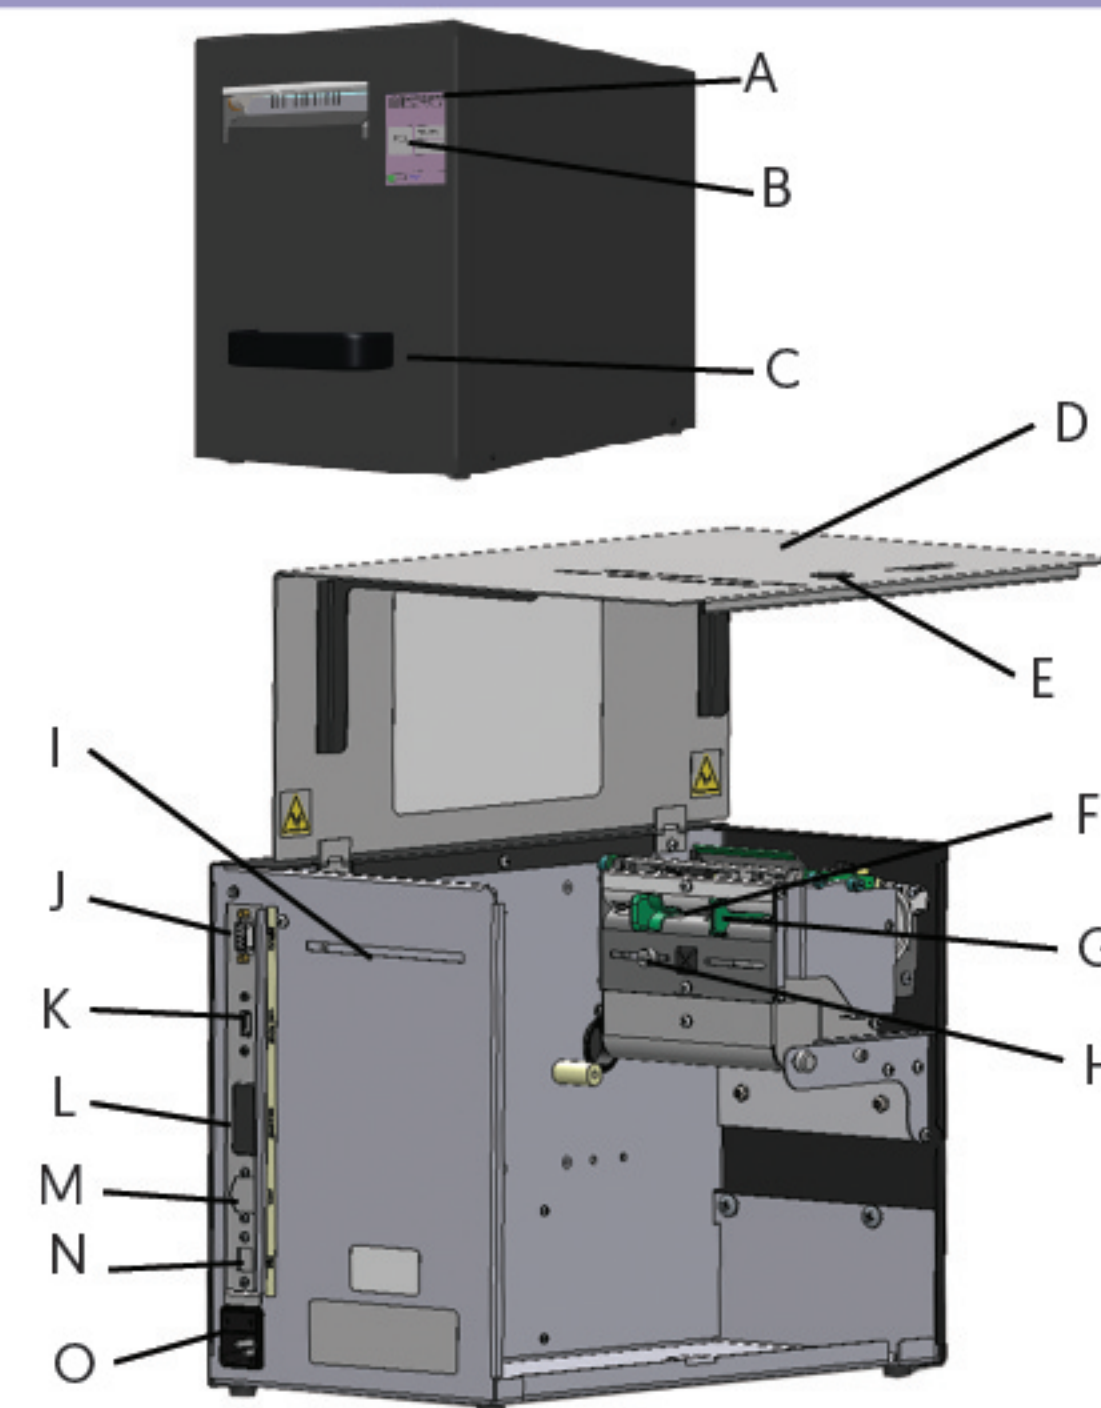

OVERVIEW

-FRONT

- (A) TOUCHSCREEN
- (B) PRINT BUTTON
- (C) CARRYING HANDLE

-BACK

- (D) CABINET DOOR (IN THE OPEN POSITION)
- (E) CABINET DOOR LOCK (OPTIONAL)
- (F) INTERNAL MEDIA SLOT
- (G) ADJUSTABLE MEDIA GUIDES
- (H) MEDIA GUIDE THUMBSCREW
- (I) EXTERNAL MEDIA ENTRY SLOT
- (J) RS-232 SERIAL PORT
- (K) HOST USB (FOR CODE UPDATES)
- (L) CASH DRAWER PORT (OPTIONAL)
- (M) ETHERNET PORT
- (N) USB PORT
- (O) POWER SWITCH AND CONNECTION HUB